


Prizelawn® CBR III ROTARY SPEADER #15069 SIDE DEFLECTOR KIT

1. Remove Plastic Plug covering hole in Frame Bumper . <u>Remove the top nut and bolt only holding</u> the Brace/Leg to the Frame. Slide the Deflector Plate Assembly between the Frame and the Impeller as shown. Pivot the Deflector Plate Bracket upward and slide bracket around Frame. Align bolt hole in the Frame and the Bracket and secure with a new nut, bolt, and lockwasher supplied. Install Front Pivot Bracket over the end of the Deflector Plate Rod and secure Bracket to the Frame Bumper using the #10 sheet metal screw supplied. Make sure Deflector Plate rotates freely.

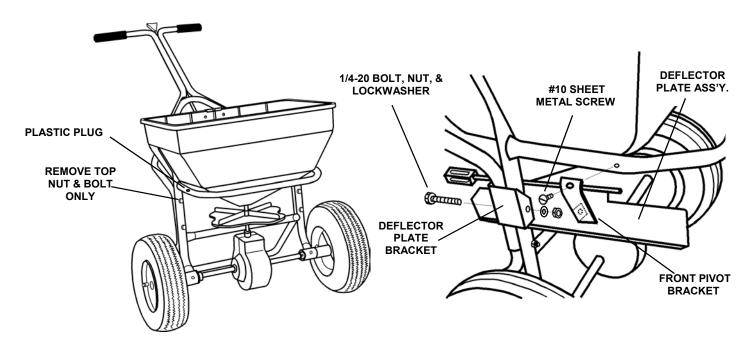

2. With Deflector Plate in the "**DOWN**" position, Insert the longer end of the Control Rod with the formed tab into the slotted bracket on the Deflector Plate assembly as shown. Rotate the rod as shown to secure rod into bracket.

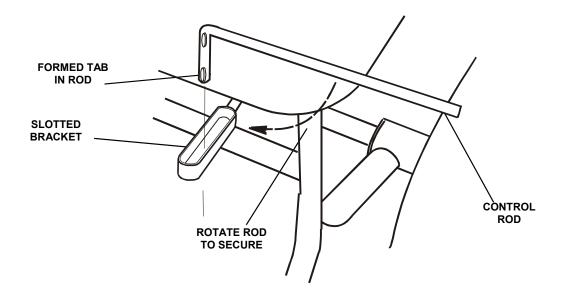


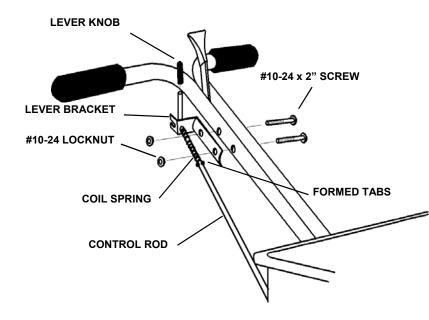

3. Slide the Coil Spring onto Rod until it touches the formed tabs on Control Rod, followed by the Lever Bracket as shown. Align holes in side of Upper Handle and the Lever Bracket and secure with two (2) #10-24 x 2" stainless steel screws and locknuts supplied. Slide Lever Knob on end of Rod.

HOW TO USE

The deflector plate can be placed in two positions. The "ON" position (down) or the "OFF" position (up). To operate, pull the control rod out from the handle bracket to clear the notch and rotate it to the "ON" position as shown. Rod will automatically lock in each position.

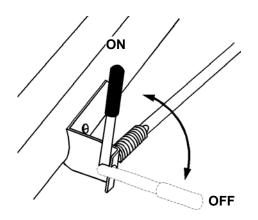

In the "ON" position, the material exiting the right hand side is deflected as shown. This allows the spreader to be butted up against a sidewalk, driveway, lot line etc. minimizing the amount of material thrown into these areas.

